


How to Build a Closet Organizer

[Index](#) > [Carpentry](#) > [Shelves](#) > [Closet Organizers](#) >

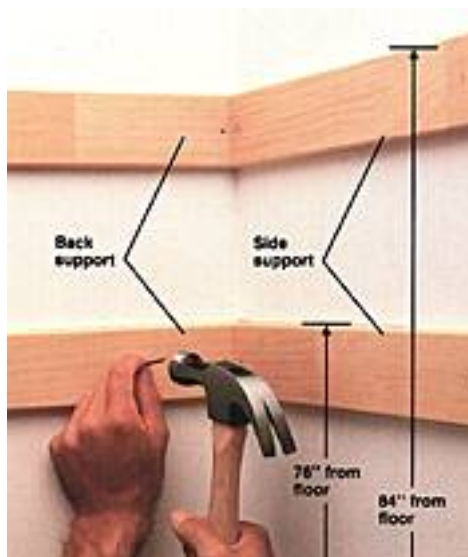

1. Cut 1 × 3 shelf supports to fit back and end walls of the closet. Attach supports to the wall with top edges 84" above floor, using 8d finish nails driven into the wall studs.

2. Cut additional shelf supports and attach to wall with top edges 76" above floor, using 8d finishing nails driven into wall studs.



3. Cut two 11 7/8-inch-wide shelves (B) from 3/4-inch plywood. Cut length of shelves to fit closet width.

4. Measure and cut two 11 7/8 × 76" shelf unit sides (A) from 3/4-inch plywood.



5. Measure and cut six 11 7/8-inch-square shelves (C) from 3/4-inch plywood.



6. Assemble central shelf unit, using 6d finish nails. Space shelves evenly, or according to height of items stored. Leave top of unit open (see Step 8).



7. Position central shelf unit in middle of closet. Mark and notch shelf unit sides (A) to fit around lower shelf support.



8. Lay long shelf (B) on lower shelf supports and top of central shelf unit sides (A). Attach with 6d finish nails. Lay remaining long shelf on upper shelf supports and attach with 6d finish nails.



9. Attach pole bracket to shelf unit side (A), 11" from rear wall and 3" below long shelf. Attach opposite bracket directly to wall stud with a screw or to wallboard using wall anchor. If desired, install brackets for lower clothes pole 38" above floor.

Finished closet organizer allows easy access to stored items. Place shoes, blankets, and other bulky articles in central shelf unit.

Next Steps and Related Projects:

 [How to Build a Closet Organizer](#)

 [Return To Top](#)

 [Print-Friendly Version](#)